

KOHLER®

INSTALLATION INSTRUCTIONS

安装说明书

Floor Drain

7275T 地漏	
安装之前	BEFORE YOU BEGIN
<p>所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。</p> <p>说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。</p> <p>注意事项：</p> <ol style="list-style-type: none">1. 遵守当地管路安装条例。2. 根据安装尺寸，预留地下排水管。	<p>All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.</p> <p>Please leave these instructions for the consumer. They contain important information.</p> <p>NOTES:</p> <ol style="list-style-type: none">1. Observe all local plumbing codes.2. According to rough-in dimensions, drain stub-out should be prearranged in the floor.
安装尺寸	ROUGH-IN DIMENSIONS
<div><p>The technical drawing illustrates the rough-in dimensions for the Kohler 7275T floor drain. It includes two views: a side elevation and a top-down plan view.</p><p>Side View Dimensions:</p><ul style="list-style-type: none">Overall width: $\varnothing 78$Inner opening width: $\varnothing 70$Drain body diameter: $\varnothing 44$Base diameter: $\varnothing 50$Flange thickness: 3Drain body height: 6Stub-out height: 41.5Total height: 70<p>The side view also indicates the connection to the "Finished Floor" (装修好的地面).</p><p>Top View Dimensions:</p><ul style="list-style-type: none">Overall square footprint: 100 (width) x 100 (height)Drain body diameter: $\varnothing 75$</div>	

安装步骤

INSTALLATION


为确保排水顺利，此地漏安装位置必须是整个装修好的地面的最低点。

根据排水管的直径和预计装修好地面的高度，决定排水管的预留高度。

按照确定的安装高度，找正，安装地漏。用水泥填充周围空隙。

在地砖上开孔如图所示，将地砖铺装好。

用水泥填充地漏与瓷砖间隙，去除多余水泥。

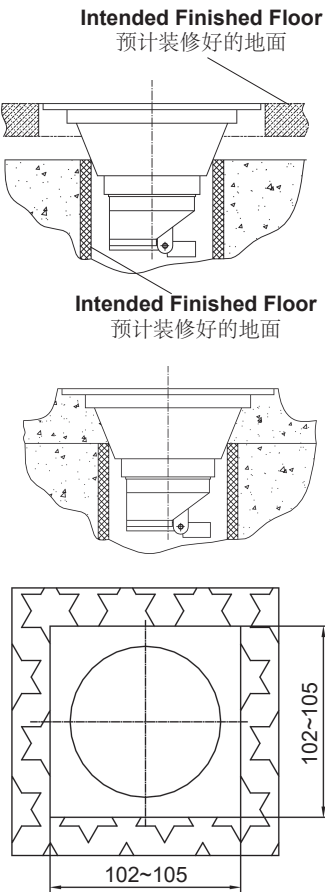

To drain easily, the mounting position of floor drain must be at the lowest area of the whole finished floor.

Determine the height of prearranged stub-out according to the diameter of stud-out and the height of intended finished floor.

Mount the floor drain according to the determined height. Position it. Fill up the interspace aroud it with cement.

The size of opening on the tile is as the figure shown. Lay the tile.

Fill up the gap between the floor drain and tile with cement. Remove any excess cement.

清洗说明

CLEANING INSTRUCTIONS

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。


有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

零件图

SERVICE PARTS

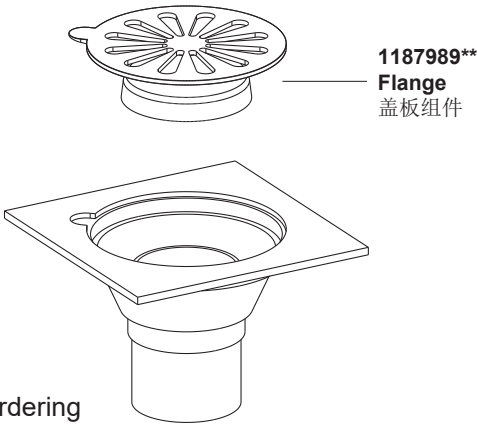

**订购时请说明颜色编号
**Color code must be specified when ordering